



USB – IMPORTANT INFORMATION

WARNING

THIS PRODUCT IS NOT A TOY. KEEP AWAY FROM CHILDREN. IT IS NOT SUITABLE FOR CHILDREN UNDER THE AGE OF 15, AS SMALL PARTS AND/OR BROKEN PARTS MAY PRESENT A CHOKING HAZARD. IF SWALLOWED, SEEK IMMEDIATE MEDICAL HELP.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. TO AVOID ELECTRICAL SHOCK, DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

Note: The data is safe in the following environments: Security x-rays at airports and magnetic-field strength not exceeding 3,500 Oe.

For customers in the U.S.A.

Changes or modifications made to this equipment not expressly approved by company may void the FCC authorization to operate this equipment.

Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Caution

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

For Customers in Canada

This Class B digital apparatus complies with Canadian ICES-003. This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada.

For Customers in Europe

This product conforms to the following European Directives: 2004/108/EC (EMC-Directive), 2006/95/EEC (Safety Directive) and 93/68/ECC (EC Marking Directive). This product complies with EN55022 Class B and EN55024 for use in the following areas: residential, commercial, and light-industrial.



USAGE

To play, plug the USB Memory Key into the USB-Port of your computer. The device may not function correctly if it is connected to a computer while starting, restarting or is started from sleep mode. Before restarting or starting the computer from sleep mode, please disconnect the USB memory key from your computer.

Do not place the drive in an environment:

- that is very hot or cold
- that is vibrating
- that is dusty or dirty
- that is exposed to direct sunlight
- where it can come in contact with moisture, water or other liquids
- where it can come in contact with corrosive gases.

Do not disconnect the USB memory key from the USB-Port while data is being downloaded. Disconnect the device from your computer as described for the operating system you are using. Otherwise, data may be damaged, destroyed or not stored correctly.

If the USB-Port on your computer is not easily accessible, you may use an extension cable or an optional USB hub to connect the USB memory key to your computer.

Notes: Do not remove the USB memory key from the USB-Port of your computer while it copying or saving data, otherwise your system may no longer recognizing the drive.

If operating under Windows the drive name may vary, depending on your Windows version

It is highly recommended that you periodically back up the data regularly saved on the device.

Swarovski is not liable for any damaged or lost data.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and other countries.

Mac and Macintosh are registered trademarks of Apple Computer Inc. in the United States of America and other countries.

Other system and product designations in this manual are registered trademarks of their respective owners. Please note that the symbols TM and © are not used in this manual.

Power consumption in standby mode: < 100 mA.

In order to conserve the luster and beauty of your Active Crystals product, carefully polish your product with a soft, lint-free cloth. Avoid any contact with abrasive cleansers.



Swarovski cannot accept any liability for financial damages, lost profits, claims from third parties, etc, arising from the use of the software provided with this device.

Software specifications may be subject to change without prior notice.

For detailed warranty instructions, please refer to the printed certificate booklet.

Copyright

Unauthorized copies of copyrighted works, including computer programs, data files, radio programs, and musical works, may represent a copyright violation and may incur criminal penalties. This device may not be used for illegal uses listed above.

WASTE DISPOSAL (WITHOUT BATTERIES)

Customer Information



This Swarovski product should not be disposed of as unsorted municipal waste. Please utilize your local collection facilities in the disposal of this product and otherwise observe all applicable legal requirements.