


QUICK RELEASE SPRING BAR

STRAP EXCHANGE CAN BE DONE WITHOUT ANY TOOLS

STEPS

- 01 Gently pull spring clip and lift the strap out
- 02 Place one end of the new strap into the slot
- 03 Gently pull spring clip once again and insert the other end into the remaining slot
- 04 Release the spring clip until it clicks. Check by carefully pulling the strap to make sure it is attached properly

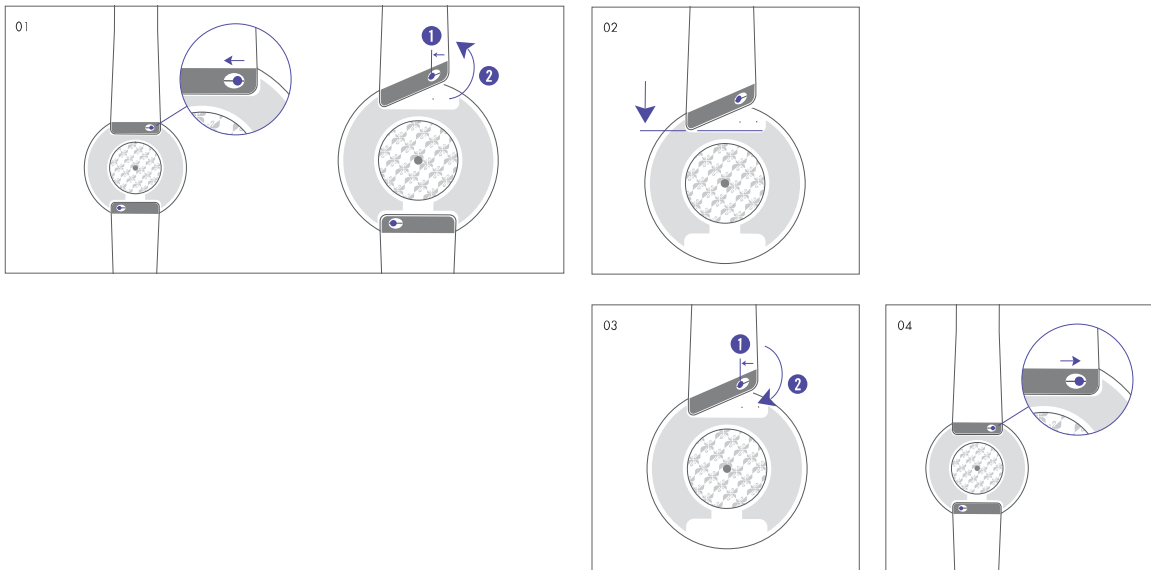

NOTE: ALMOST ALL LEATHER STRAPS ARE NOW COMING WITH QUICK RELEASE SPRING BARS.